



Memory

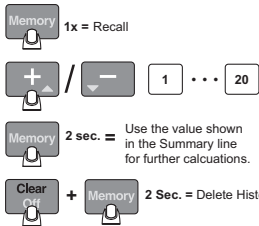

Clear Off

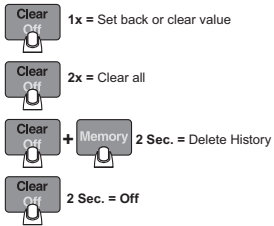

⚠️ ⚠️ WARNING

The Meter produces a visible laser beam which emerges from the front of the Meter.

Cal Power


Via Acquanera, 29 22100 COMO
 tel. 031.526.566 (r.a.) fax 031.507.984
info@calpower.it www.calspower.it

Quick
Reference
Guide

FLUKE®

Laser Distance Meter

419D

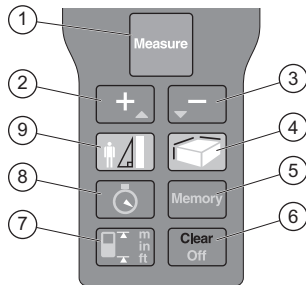

Buttons

1. Measure/Min Max/Power On
2. Plus (+)/Scroll Up
3. Minus (-)/Scroll Down
4. Area/Volume
5. Memory
6. Clear/Off
7. Reference/Units
8. Timer
9. Indirect Measurement (Pythagoras)/Stake Out



Default

