FLUKE

789/787B

ProcessMeter™

Quick Reference Guide

⚠⚠ Warning


To prevent possible electrical shock, fire, or personal injury, read the "789/787B Safety Information" before you use this Product.

Consult user documentation.


Go to www.fluke.com to register your product and find more information.

CalPower
Via Acquanera, 29 22100 COMO
tel. 031.526.566 (r.a.) fax 031.507.984
info@calpower.it www.calpower.it


Ω

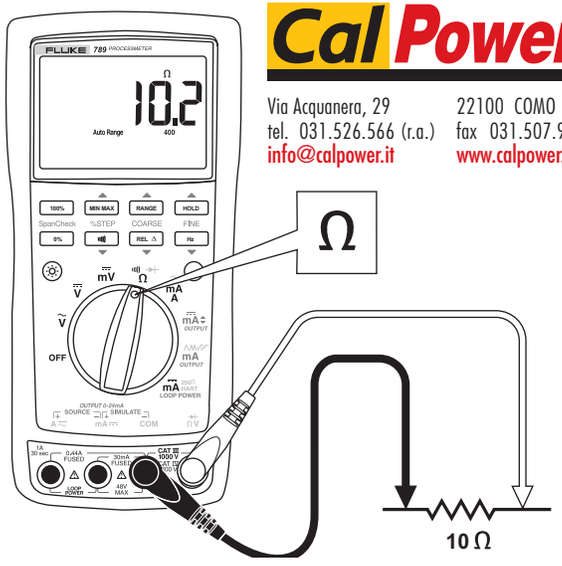


mA / A

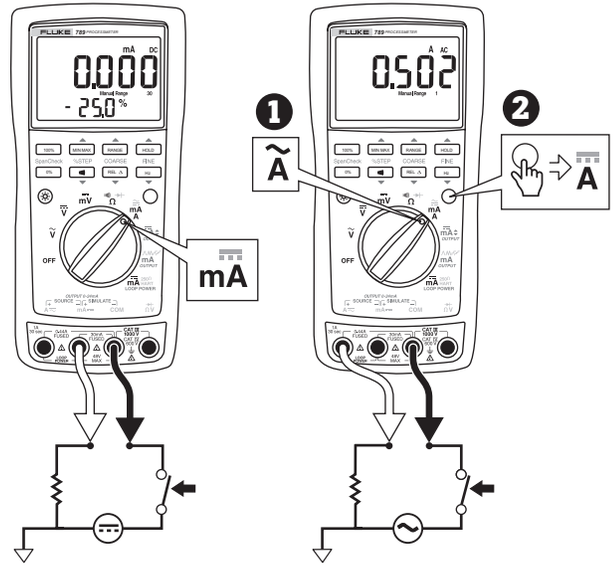


V V mV

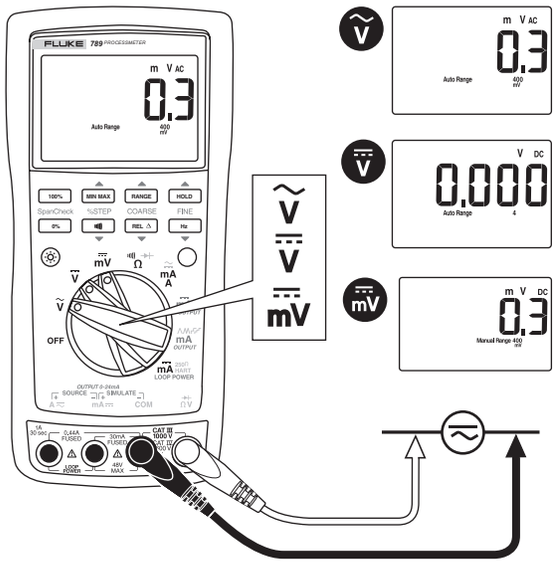



Measurement MIN MAX

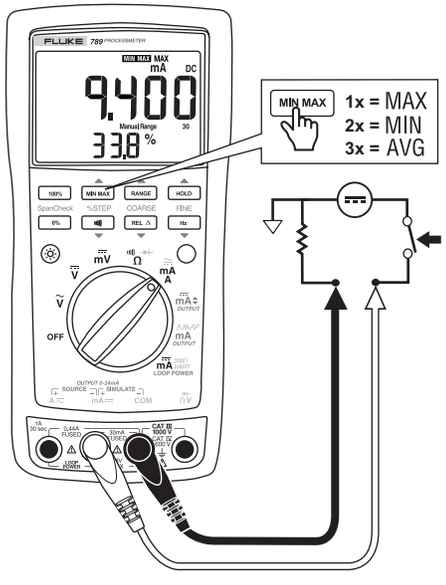

Fuse

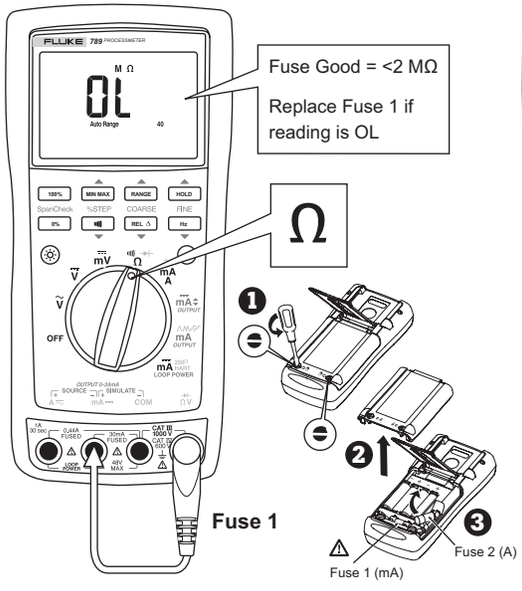


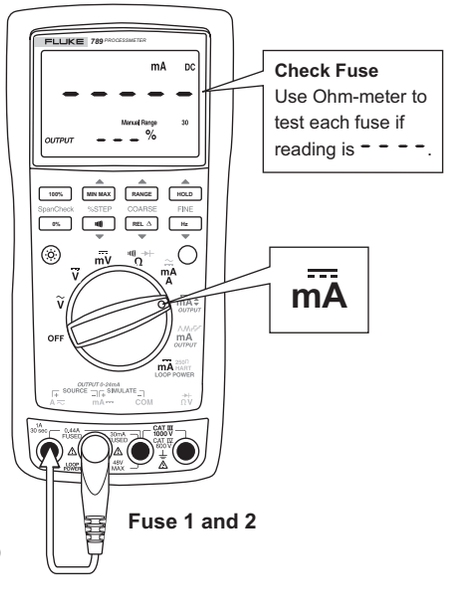


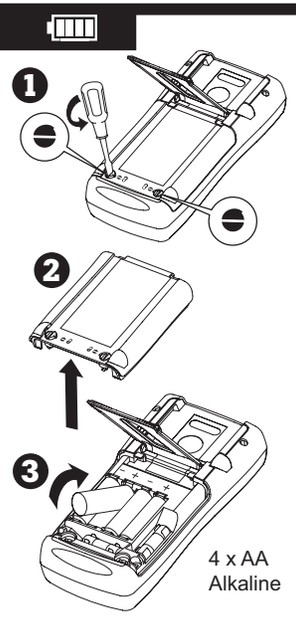



PN 4276679 August 2012, Rev. 1, 1/17

© 2012-2017 Fluke Corporation. All rights reserved.

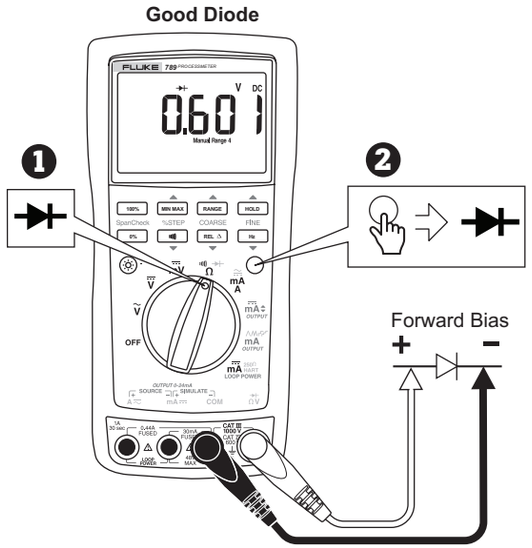


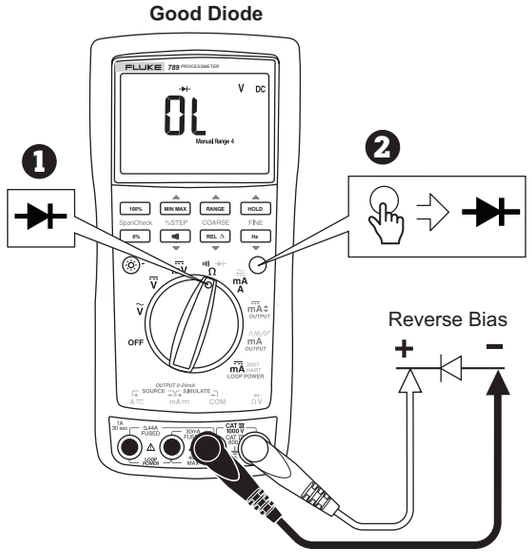

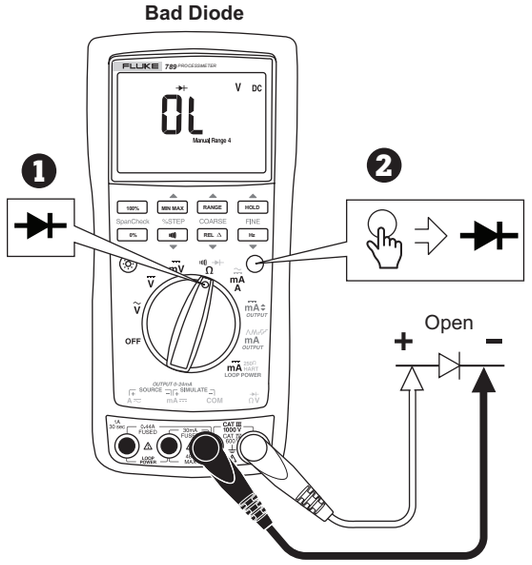


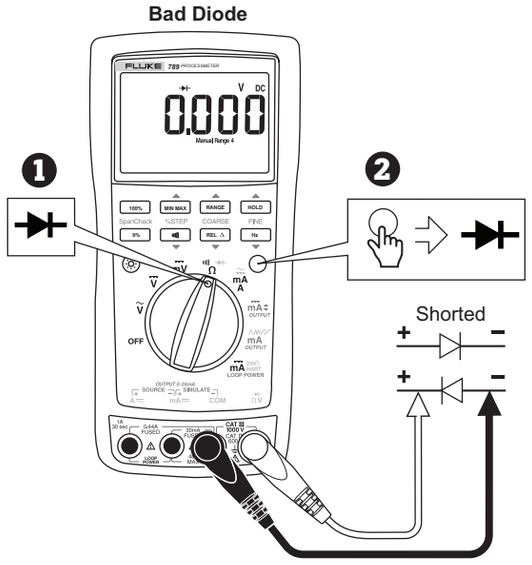

Output Source

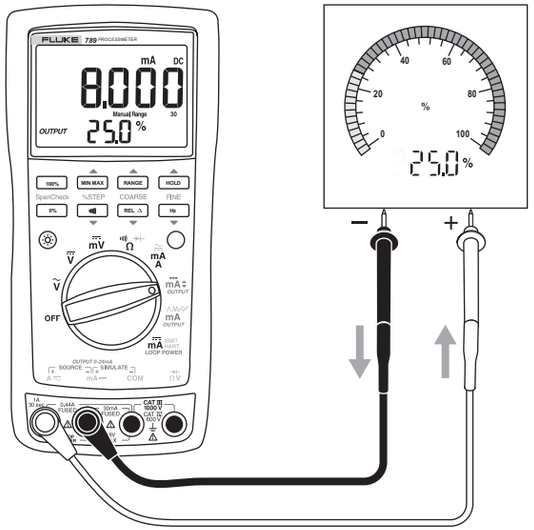

Output Simulate

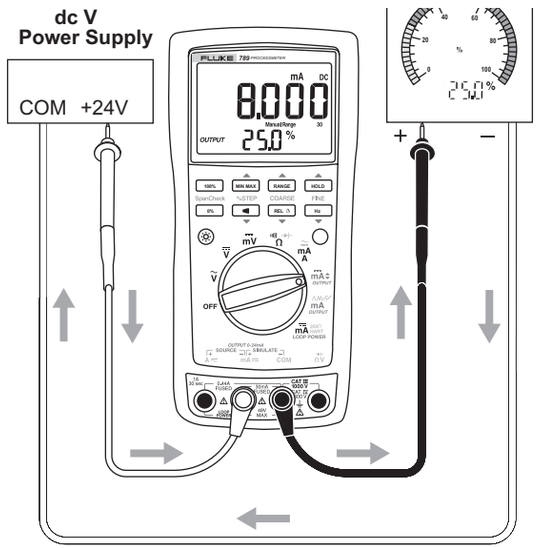

Supplying Loop Power (789 only)

